

With the BeoLink Video kit and an extra Bang & Olufsen TV set, your main Bang & Olufsen system gets an extra dimension.

Of course, you still have the benefit of an extra TV set which you can use quite independently of the TV in your main system.

But now you can also play any source you like in your main system, and – via your BeoLink installation – you can see and hear it in the room with the BeoLink Video kit and your extra TV.

This guide explains how...



4 Nice to know about...*Sound and pictures in other rooms***5 Remote operation***Using the Beo4 remote control***6 Controlling your main system****7 Also nice to know****8 Using the Beolink 1000 remote control****9 Controlling your main system****10 Also nice to know****11 Tmer Play control**

This guide describes how to operate your main Bang & Olufsen system from the room with your BeoLink Video kit and your extra Bang & Olufsen TV.

For information about operation of your extra Bang & Olufsen TV, please refer to the User's guide enclosed with the TV.

The separate Setting-up guide enclosed with the BeoLink Video kit describes in detail how to install the BeoLink Video with your extra TV, and it describes how to make your BeoLink Video setup ready for use.


Note: Your BeoLink Video setup and your main Bang & Olufsen system must be interconnected by a Bang & Olufsen BeoLink installation.

..Sound and pictures in other rooms

Together the BeoLink Video kit and your extra Bang & Olufsen TV give your main Bang & Olufsen system an extra dimension:


- On your extra TV, you can watch any video source you like from your main system.
- Via the speakers in your extra TV, you can listen to any audio source you like from your main system.
- You can control a number of daily functions in your main system from the room with your extra TV.
- And, of course, you can use your extra TV on its own.

All you need is the Beo4 remote control for the TV, and your main system can be used in your BeoLink Video room as well.

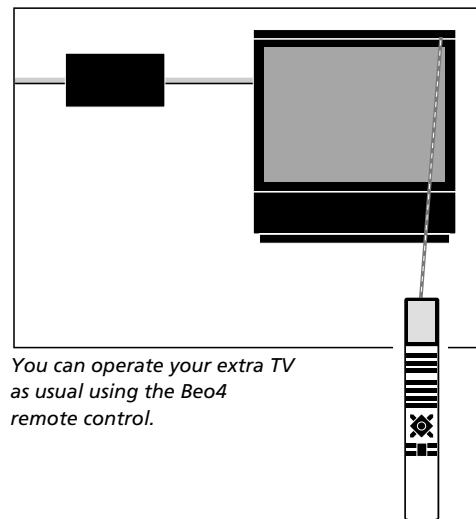

You can operate your extra TV as usual using the Beo4 remote control.

But your extra TV is also your interface with your main system: Your remote control commands are received by the TV, and – via the BeoLink Video kit and your BeoLink installation – the TV communicates your instructions to your main Bang & Olufsen system.

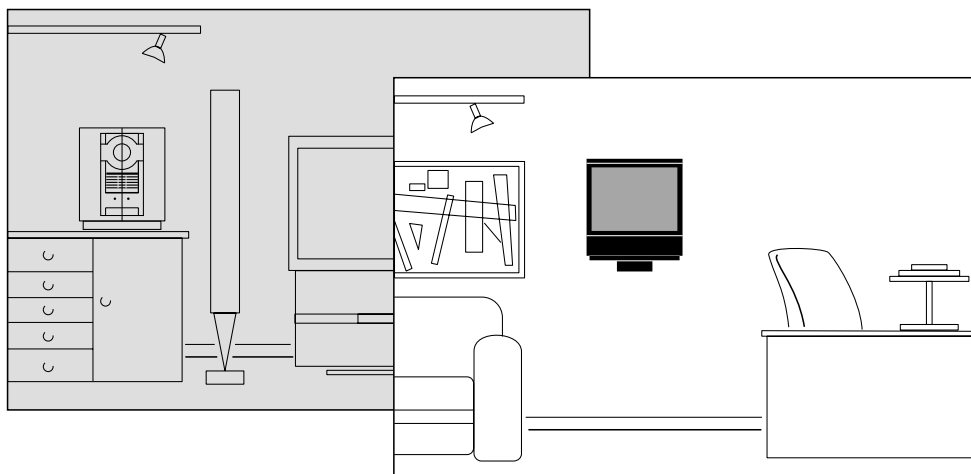

Your main Bang & Olufsen audio-, video-, or AV system and your BeoLink Video setup must be interconnected by a BeoLink installation.



Using the Beo4 remote control

The Beo4 remote control is the key to your BeoLink Video setup.

Apart from operating your extra TV, Beo4 also enables you to switch on any source you like (audio/video) in your main Bang & Olufsen system in order to watch or listen to it on your extra TV.

You can then control the daily playback functions for the source – just as if you were operating your main system directly, using the Beo4 remote control.

You will find that Beo4 and your BeoLink Video setup both respond readily to your instructions – giving you sound and pictures from your main system within seconds after pressing the button.

See how on the next few pages...

Using the Beo4 remote control, you can:

- Operate your extra Bang & Olufsen TV as usual (see how in your TV User's guide).
- Watch any video source you like (a video tape, a satellite program, etc.) from your main system on your extra TV (see how on page 6).
- Listen to any audio source you like (a radio program, a CD, a tape, etc.) from your main system via the speakers in your extra TV (see how on page 6).
- Operate a number of daily playback functions for the audio or video source that is currently playing (see how on page 6).
- Include your extra TV speakers in a Timer Play programming of your main system (see page 11).

The Beo4 remote control is enclosed with all recent Bang & Olufsen TVs.

	Switches on your extra TV Then operate the TV as usual
Main video sources...	
	Switches on to satellite TV
	Starts the video tape recorder
Main audio sources...	
	Switches on the radio
	Starts the CD player
	Starts the tape recorder
 or 	Press to step through your programs; or to step from track to track on a CD, a video- or an audio tape
 through 	Alternatively, key in the exact program or track number you want
	Press to pause your CD player, or your audio or video tape recorder (Press STOP twice to stop your VTR completely before winding)
 or 	Rewinds a video or audio tape; searches backwards on a CD Fast forwards a video or audio tape; searches forwards on a CD
	Press to resume playing
	Press to switch off your extra TV Press for 2 seconds to switch off your main system as well

Controlling your main system

You can switch on any source you like (audio/video) from your main Bang & Olufsen system and watch it on your extra TV, or listen to it via the speakers in your extra TV.

To do so, simply press the appropriate source button on the Beo4 remote control.

While the source is playing, you can switch programs, listen to specific tracks, stop and resume playing, search and wind, etc.

The button sequences to the left on this page show you how...

Note: For information about how to operate your extra TV, please refer to your TV User's guide.

Note: While you are watching or listening to a source from your main system on your extra TV, you can adjust the sound in your extra TV speakers, without interfering with your main system:

-  or  raises or lowers the volume level
- Press the volume button right on the middle to silence the speakers immediately.
Press again to recall the sound.

To make any further adjustments to the sound (or to the picture) in your extra TV, please refer to the User's guide for the TV.

Note: The functions mentioned on these pages are only available on your extra TV in so far as they are supported by your main Bang & Olufsen system. Please refer to the User's guide for your main system.

Also nice to know...

- If your main Bang & Olufsen system is in stand-by when you switch it on via your extra TV, you will only get sound and pictures on your extra TV – neither the speakers, nor the TV screen in your main system will be cut in.
- If you try to switch on a source in your main Bang & Olufsen system, and you get the pictures and/or the sound from a different source on your extra TV, it may be because a recording (audio or video) is progressing in your main system.
- When you watch a video source from your main system, for example a satellite program, you will get pictures and *mono sound* on your extra TV. To obtain pictures and *stereo sound* (if any), you must use the **AU*** LIST button: Switch the entire system to stand-by; then press, for example, SAT, LIST until **AU*** is displayed, then SAT. (To obtain the *stereo sound* alone, just press LIST until **AU*** is displayed, then SAT.)
- If, for some reason, you want to watch a TV program from your main TV (for example to watch a decoded program), press LIST to display **LINK*** then TV.
- To switch mono/stereo sound on a radio program; to switch language on a TV or satellite program; or to switch sound track on a video tape – press LIST to display **SOUND*** then GO repeatedly.
- To start playback on a Bang & Olufsen record player in your main system, press LIST to display **PHONO*** then GO. Pressing **▲** or **▼** while you are listening to a record makes the record player step through the music in 8 mm steps.
- To start playback on a secondary Bang & Olufsen audio- or video tape recorder in your main system, press LIST to display either **A.TAPE2*** or **V.TAPE2*** then GO.
- To switch on a DVD or CDV player connected to your main video system, press DVD on Beo4.

*Note: In order to display **AU**, **LINK**, **SOUND**, **PHONO**, **A.TAPE2** or **V.TAPE2** on Beo4, you must add the function to Beo4. Please refer to Beo4's own User's guide and the chapter, **Customising your Beo4**, for further instruction.



Using the Beolink 1000 remote control

You may also use the Beolink 1000 remote control as the key to your BeoLink Video setup.

Apart from operating your extra TV, Beolink 1000 also enables you to switch on any source you like (audio/video) in your main Bang & Olufsen system in order to watch or listen to it on your extra TV.

You can then control the daily playback functions for the source – just as if you were operating your main system directly, using the Beolink 1000 remote control.

You will find that Beolink 1000 and your BeoLink Video setup both respond readily to your instructions – giving you sound and pictures from your main system within seconds after pressing the button.

See how on the next few pages...

Using the Beolink 1000 remote control, you can:

- Operate your extra Bang & Olufsen TV as usual (see how in your TV User's guide).
- Watch any video source you like (a video tape, a satellite program, etc.) from your main system on your extra TV (see how on page 9).
- Listen to any audio source you like (a radio program, a CD, a tape, etc.) from your main system via the speakers in your extra TV (see how on page 9).
- Operate a number of daily playback functions for the audio or video source that is currently playing (see how on page 9).
- Include your extra TV speakers in a Timer Play programming of your main system (see page 11).

Controlling your main system

You can switch on any source you like (audio/video) from your main Bang & Olufsen system and watch it on your extra TV, or listen to it via the speakers in your extra TV.

To do so, simply press the appropriate source button on the Beolink 1000 remote control.

While the source is playing, you can switch programs, listen to specific tracks, stop and resume playing, “turn” a tape, search and wind, etc.

The button sequences to the left on this page show you how...

Note: For information about how to operate your extra TV, please refer to your TV User’s guide.

Note: While you are watching or listening to a source from your main system on your extra TV, you can adjust the sound in your extra TV speakers, without interfering with your main system:

- ^ or v raises or lowers the volume level
- MUTE silences the speakers immediately
Press MUTE again to recall the sound.

To make any further adjustments to the sound (or to the picture) in your extra TV, please refer to the User’s guide for the TV.

Note: The functions mentioned on these pages are only available on your extra TV in so far as they are supported by your main Bang & Olufsen system. Please refer to the User’s guide for your main system.

Switches on your extra TV Then operate the TV as usual	TV
Main video sources... Switches on to satellite TV	SAT
Starts the video tape recorder	V.TAPE
Main audio sources... Switches on the radio	RADIO
Starts the CD player	CD
Starts the tape recorder To “turn” the tape to play the otherside, press SHIFT then SOUND	A.TAPE
Press to step through your programs; or to step from track to track on a CD, a video- or an audio tape	▲ or ▼
Alternatively, key in the exact program or track number you want	0 through 9
Press to pause your CD player, or your audio or video tape recorder (Press STOP twice to stop your VTR completely before winding)	STOP
Rewinds a video or audio tape; searches backwards on a CD Fast forwards a video or audio tape; searches forwards on a CD	◀◀ or ▶▶
Press to resume playing	PLAY
Press to switch off your extra TV Press for 2 seconds to switch off your main system as well	●

Also nice to know...

- If your main Bang & Olufsen system is in stand-by when you switch it on via your extra TV, you will only get sound and pictures on your extra TV – neither the speakers, nor the TV screen in your main system will be cut in.
- If you try to switch on a source in your main Bang & Olufsen system, and you get the pictures and/or the sound from a different source on your extra TV, it may be because a recording (audio or video) is progressing in your main system.
- When you watch a video source from your main system, for example a satellite program, you will get pictures and *mono sound* on your extra TV. To obtain pictures and *stereo sound* (if any), you must use the AV button: Switch the entire system to stand-by; then press, for example, SAT, AV, SAT. (To obtain the *stereo sound* alone, just press AV, SAT.)
- If, for some reason, you want to watch a TV program from your main TV (for example to watch a decoded program), press LINK then TV.
- To switch mono/stereo sound on a radio program; to switch language on a TV or satellite program; or to switch sound track on a video tape – press SHIFT then SOUND repeatedly.
- To start playback on a Bang & Olufsen record player in your main system, press LIST to display PHONO then GO. Pressing ▲ or ▼ while you are listening to a record makes the record player step through the music in 8 mm steps.
- To start playback on a secondary Bang & Olufsen audio- or video tape recorder in your main system, press SHIFT then A.TAPE or V.TAPE.
- To switch on a DVD or CDV player connected to your main video system, press SHIFT then SAT.

If you have programmed your main Bang & Olufsen system to start playing automatically (Timer Play) – for example to wake you up in the morning – the speakers in your extra TV can be included as well*.

To do so, you must call up the Setup menu in your extra TV, and set the item *Timer sound (or Timer)* to *On* – see how in the User's guide for your TV.

Your extra TV speakers will then be included whenever your main system starts playing a Timer Play programming.

* Note: Not all types of Bang & Olufsen TVs have this feature.

Date purchased

Contact person

Dealer

Telephone

Address

Record your serial numbers here:

BeoLink Video kit

BeoVision TV

Beo4

Dear Customer,

Your needs as the user of our products are always given careful consideration during the design and development process, and we strive to make our products easy and comfortable to operate.

We therefore hope that you will take time to drop us a line, telling us about your experiences with your Bang & Olufsen system. Anything which you consider important – positive or negative – may help us in our constant efforts to refine our products.

Thank you!
Please write to:

Customer information dept. 7240
Bang & Olufsen als
DK-7600 Struer
Denmark